

COLOrband PiX-M

User Manual

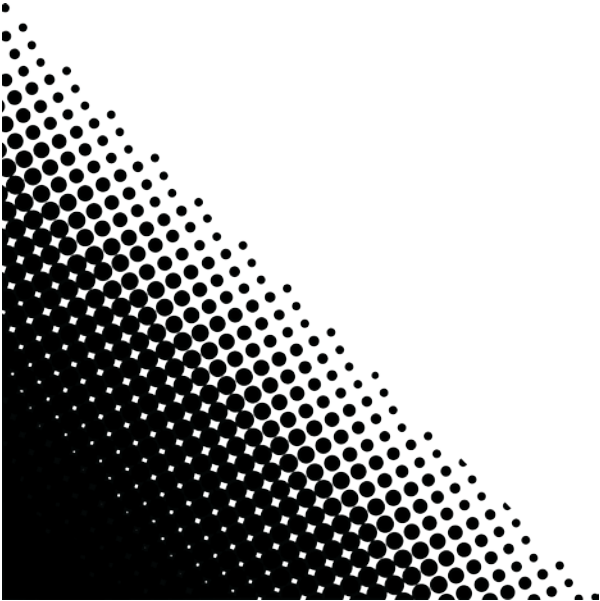
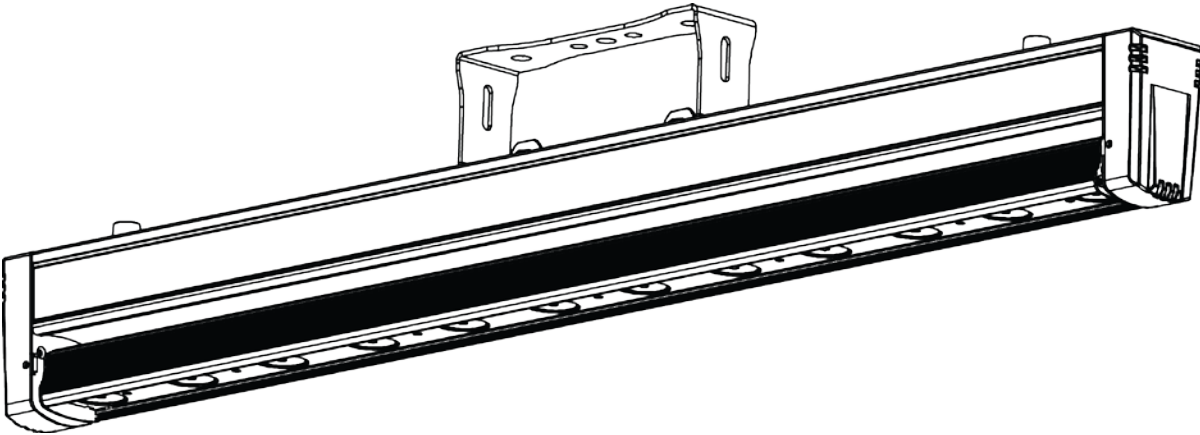


TABLE OF CONTENTS

1. Before You Begin	3
What Is Included	3
Unpacking Instructions	3
Claims	3
Text Conventions	3
Symbols	3
Disclaimer	3
Product at a Glance	4
Safety Notes	4
2. Introduction	5
Overview	5
Dimensions	6
3. Setup	7
AC Power	7
Fuse Replacement	7
Power Linking	8
Mounting	9
Orientation	9
Rigging	9
4. Operation	10
Control Panel Operation	10
Menu Map	10
Configuration (DMX)	11
Starting Address	11
DMX Channel Modes, Assignments, and Values	12
42-Channel	12
42-Channel (cont.)	13
38-Channel	14
20-Channel	15
14-Channel	16
11-Channel	16
10-Channel	17
8-Channel	18
6-Channel	18
5-Channel	18
Configuration (Standalone)	19
Sound-Active Mode	19
Automatic Mode	19
Program Speed	19
Static Color	20
Custom Color Mixing	20
Selecting the Tilting Action	21
Locking and Unlocking the Touch Control Panel	21
Selecting the Dimmer Mode	21
Calibrating the Moving Strip	21
Master/Slave Mode	22
5. Technical Information	23
Product Maintenance	23
6. Technical Specifications	24
Returns	25
Contact Us	25

1. BEFORE YOU BEGIN

What Is Included

- COLORband™ PiX-M
- Hanging Bracket with Mounting Hardware
- Power Cord
- Warranty Card
- Quick Reference Guide

Unpacking Instructions

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

Claims




If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not CHAUVET®. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with CHAUVET® within 7 days of delivery.

Text Conventions

Convention	Meaning
1–512	A range of values
50/60	A set of values of which only one can be chosen
Settings	A menu option not to be modified
Menu > Settings	A sequence of menu options to be followed
<ENTER>	A key to be pressed on the product's control panel
ON	A value to be entered or selected

Symbols

Symbol	Meaning
	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.

Disclaimer

The information and specifications contained in this User Manual are subject to change without notice. CHAUVET® assumes no responsibility or liability for any errors or omissions, and reserves the right to revise or recreate this manual at any time. Download the latest version from www.chauvetlighting.com.

© Copyright 2013 CHAUVET®. All rights reserved.

Electronically published by CHAUVET® in the United States of America.

Author	Date	Editor	Date
A. Leon	05/24/13	T. Yeago	05/28/13

Product at a Glance

Use on Dimmer	X	Auto Programs	P
Outdoor Use	X	Auto-ranging Power Supply	P
Sound-Activated	P	Replaceable Fuse	P
DMX	P	User-Serviceable	X
Master/Slave	P		

Safety Notes

These notes include important information about the mounting, usage, and maintenance of this product; read before using the product.



- Always connect the product to a grounded circuit to avoid the risk of electrocution.
- Always disconnect the product from the power source before cleaning or replacing the fuse.
- Avoid direct eye exposure to the light source while the product is on.
- Make sure the power cord is not crimped or damaged.
- Never disconnect the product from power by pulling or tugging on the cord.
- If mounting the product overhead, always secure to a fastening device using a safety cable.
- Make sure there are no flammable materials close to the product when operating.
- Do not touch the product's housing when operating because it may be very hot.




- Always make sure that the voltage of the outlet to which you are connecting the product is within the range stated on the decal or rear panel of the product.
- The product is for indoor use only! (IP20) To prevent risk of fire or shock, do not expose the product to rain or moisture.
- Always install the product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Be sure that no ventilation slots on the product's housing are blocked.
- Never connect the product to a dimmer.
- Make sure to replace the fuse with another of the same type and rating.
- Never carry the product from the power cord or any moving part. Always use the hanging/mounting bracket.
- The maximum ambient temperature (T_a) is 104° F (40° C). Do not operate the product at higher temperatures.
- In the event of a serious operating problem, stop using the product immediately.
- Never try to repair the product. Repairs carried out by unskilled people can lead to damage or malfunction. Contact the nearest authorized technical assistance center.
- This product is not intended for permanent installation.



- Keep this User Manual for future use. If you sell the product to another user, be sure to give this document to the next owner.


2. INTRODUCTION

Overview

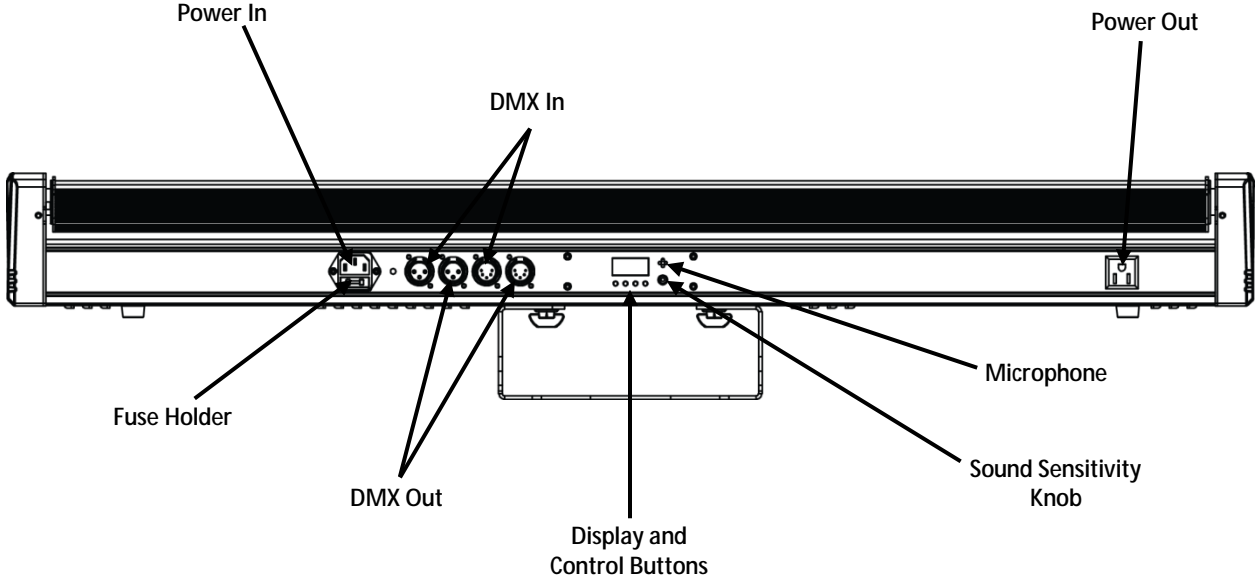

Back Panel View

Dimensions

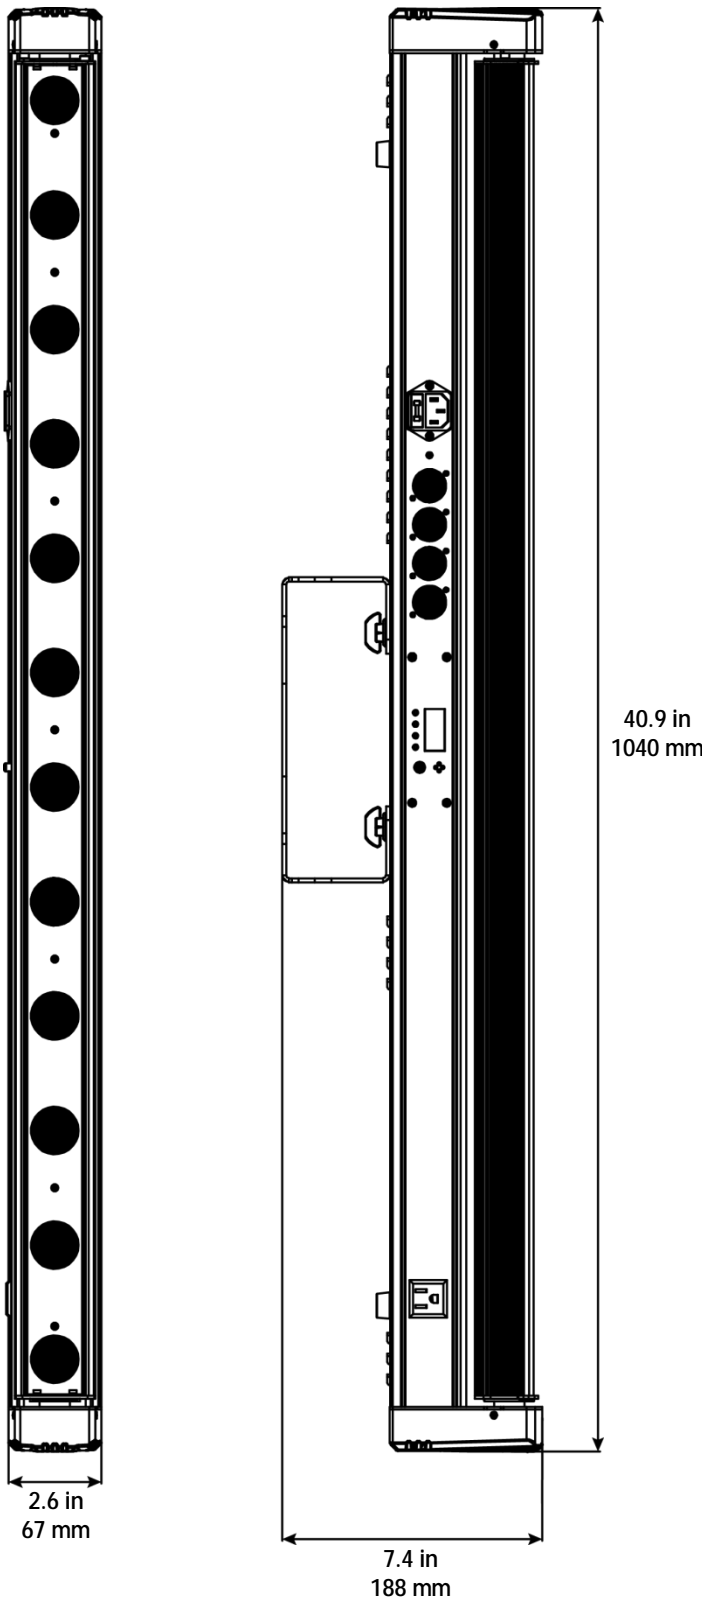

3. SETUP

AC Power The COLORband™ PiX-M has an auto-ranging power supply and it can work with an input voltage range of 100~240 VAC, 50/60 Hz.

To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart. The listed current rating indicates the product's average current draw under normal conditions.



Always connect the product to a protected circuit (circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.




Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0–100% switch.

Fuse Replacement



Disconnect the product from power before replacing the fuse.

1. Disconnect the product from power.
2. Wedge the tip of a flat-head screwdriver into the slot of the fuse holder.
3. Pry the fuse holder out of the housing.
4. Remove the blown fuse from the holder.
5. Replace with a fuse of the exact same type and rating.
6. Insert the fuse holder back in place and reconnect power.

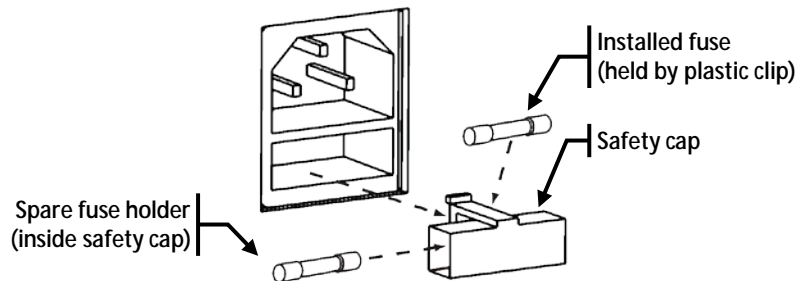


A spare fuse is not included; however, the safety cap has room for a spare.



Always replace a blown fuse with the same type and rating.

Power Linking The product provides power linking via the Edison/IEC outlet located in the back of the unit.

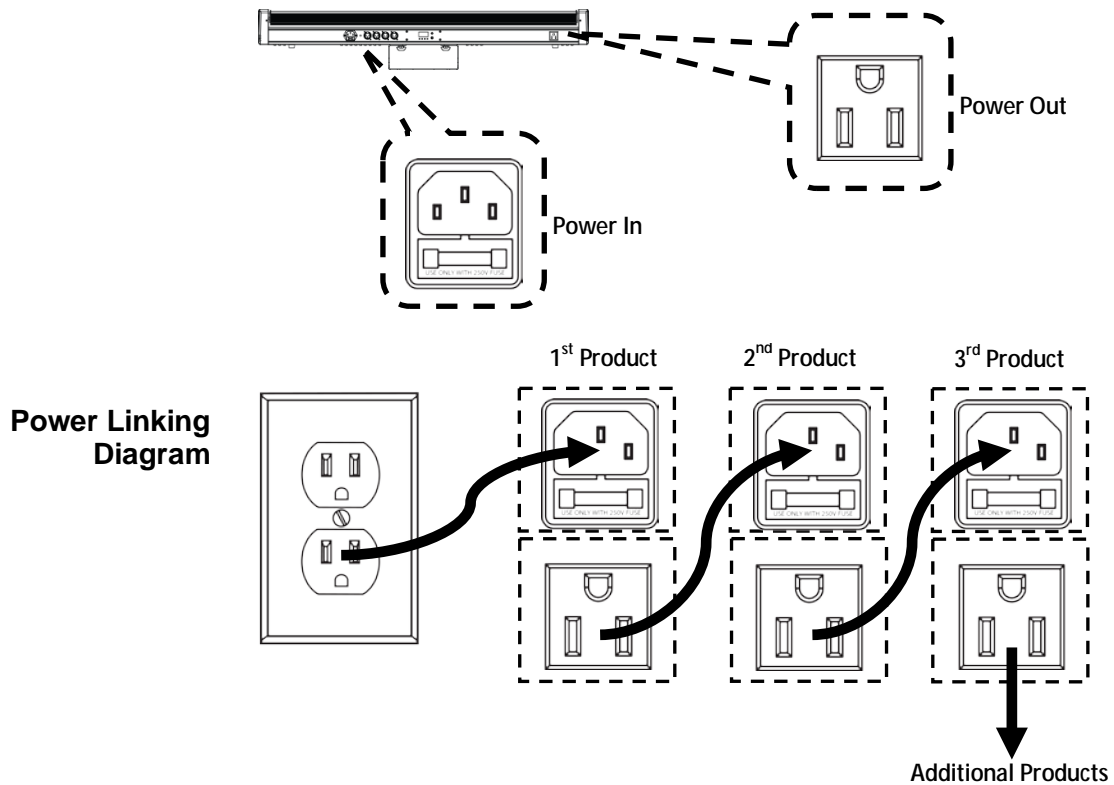

You can power link up to 8 COLORband™ PiX-M units on 120 VAC or up to 15 COLORband™ PiX-M units on 230 VAC.




The power linking diagram shown above corresponds to the North American version of the product ONLY! If using the product in other markets, you must consult with the local CHAUVET® distributor as power linking connectors and requirements may differ in your country or region.

Mounting Before mounting the product, read and follow the safety recommendations indicated in the Safety Notes.

Orientation The COLORband™ PiX-M may be mounted in any position; however, make sure adequate ventilation is provided around the product.

- Rigging**
- Before deciding on a location, always make sure there is easy access to the product for maintenance and programming.
 - Make sure that the structure or surface onto which you are mounting the product can support the product's weight (see the [Technical Specifications](#)).
 - When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, such as an elevated platform or a truss.
 - When rigging the product onto a truss, you should use a mounting clamp of appropriate weight capacity. The bracket has a 13-mm holes, which are appropriate for this purpose.
 - When power linking multiple products, you must always consider the length of the power linking cable and mount the products close enough for the cable to reach.
 - The rubber feet also serve as floor supports. When mounting the product on the floor, make sure that the product and cables are away from people and vehicles.

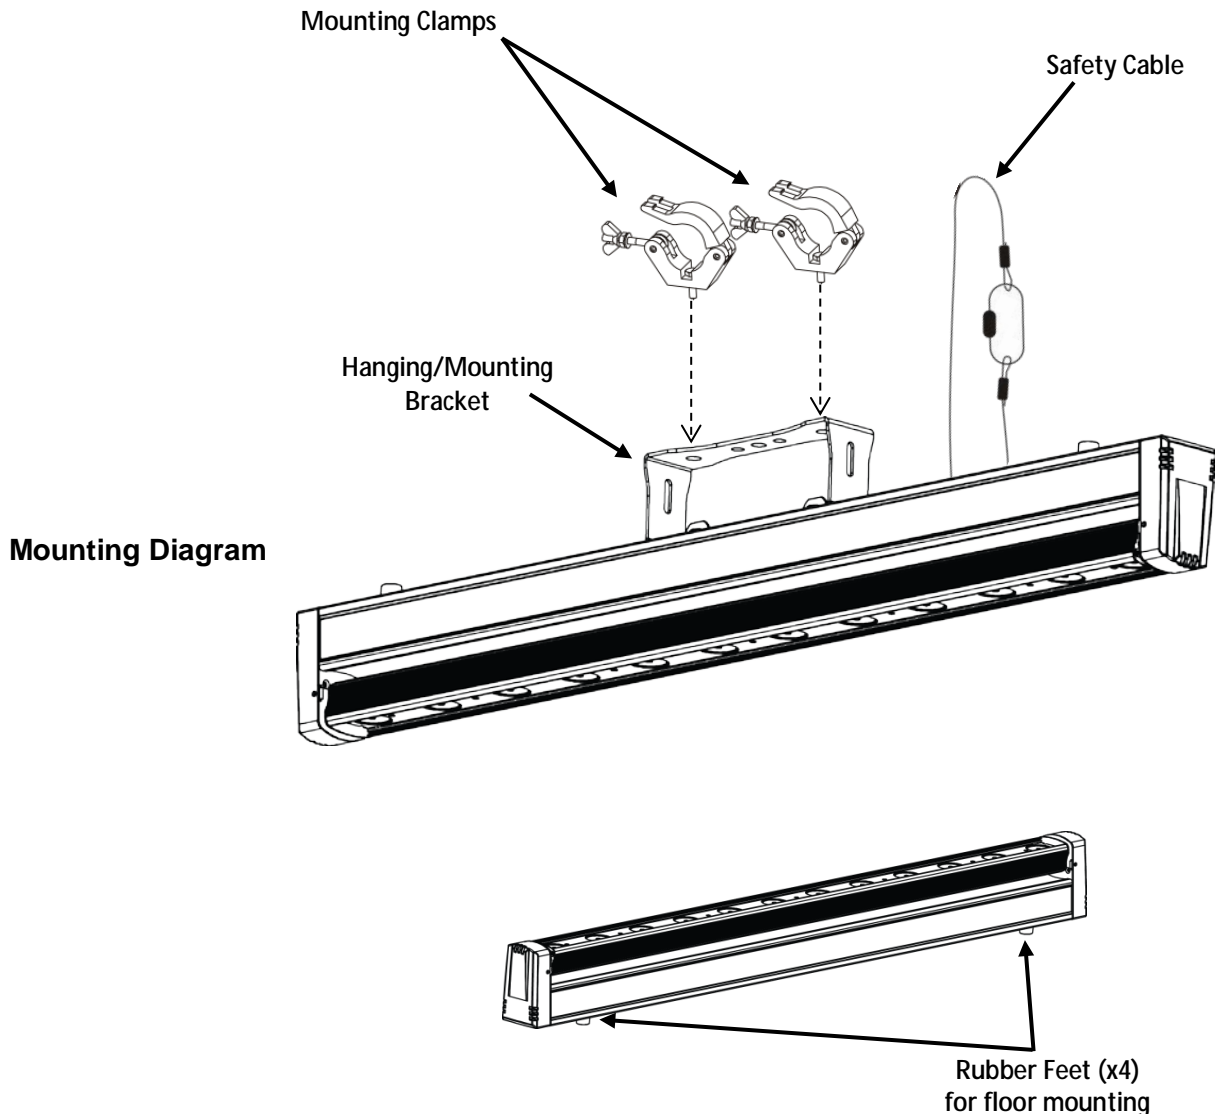

4. OPERATION

Control Panel Operation

To access the control panel functions, use the four buttons located underneath the display.

Button	Function
<MENU>	Selects an operation mode or to backs out of the current menu option
<UP>	Scrolls up the list of options or selects a higher value
<DOWN>	Scrolls down the list of options or selects a lower value
<ENTER>	Activates a menu option or a selected value

Menu Map

Mode	Programming Levels	Description	
DMX Personalities and Starting Address	5-CH	d 1–d512 Selects DMX personality and starting address	
	6-CH		
	8-CH		
	10CH		
	11CH		
	14CH		
	20CH		
	38CH		
	42CH		
Static Colors	C--	r	Red
		g	Green
		b	Blue
		gb	Cyan
		r b	Magenta
		rg	Yellow
		rgb	White
Tilt	t--	t 0–t 50	Tilt position (0–270°)
		t 51–t100	Automatic motorized tilt speed (slow to fast)
Auto Programs	P--	P 1–P 14	Chases 1–14 (Chase 14 = random Chases 1–13)
Program Speed	S--	S 1–S100	Selects auto program speed (slow to fast)
Sound-Active Mode	Snd		Sound-Active mode
Custom Color Mixing	U--	r 0–r255	Red (0–100%)
		g 0–g255	Green (0–100%)
		b 0–b255	Blue (0–100%)
		t 0–t255	Tilt position (0–270%)
Touch Control Panel Lock	Encd	OFF	Locks touch control panel
		ON	
Dimmer	DIM	OFF	Dimmer speed off
		DIM1	Dimmer, fast speed
		DIM2	Dimmer, middle speed
		DIM3	Dimmer, slow speed
Offset	OFFS	0–255	Offset (calibration mode)

Configuration (DMX)

Set the product in DMX mode to control with a DMX controller.

1. Connect the product to a suitable power outlet.
2. Turn the product on.
3. Connect a DMX cable from the DMX output of the DMX controller to the DMX input socket on the product.

Starting Address

When selecting a starting DMX address, always consider the number of DMX channels the selected DMX mode uses. If you choose a starting address that is too high, you could restrict the access to some of the product's channels.

The COLORband™ PiX-M uses up to **42** DMX channels in its 42-channel DMX personality, which defines the highest configurable address to **471**.


If unfamiliar with DMX, download the DMX Primer from www.chauvetlighting.com.

To select the starting address, do the following:

1. Press **<MENU>** repeatedly until the desired DMX personality (**5-CH, 6-CH, 8-CH, 10CH, 11CH, 14CH, 20CH, 38CH, or 42CH**) shows on the display.
2. Press **<ENTER>**.and **d 1-d512** shows on the display.
3. Use **<UP>** or **<DOWN>** to select the starting address.
4. Press **<ENTER>**.

DMX Channel Modes, Assignments, and Values

42-Channel	Channel	Function	Value	Setting	Section
	1	Red	000 ◊ 255	0-100%	1
	2	Green	000 ◊ 255	0-100%	
	3	Blue	000 ◊ 255	0-100%	
	4	Red	000 ◊ 255	0-100%	2
	5	Green	000 ◊ 255	0-100%	
	6	Blue	000 ◊ 255	0-100%	
	7	Red	000 ◊ 255	0-100%	3
	8	Green	000 ◊ 255	0-100%	
	9	Blue	000 ◊ 255	0-100%	
	10	Red	000 ◊ 255	0-100%	4
	11	Green	000 ◊ 255	0-100%	
	12	Blue	000 ◊ 255	0-100%	
	13	Red	000 ◊ 255	0-100%	5
	14	Green	000 ◊ 255	0-100%	
	15	Blue	000 ◊ 255	0-100%	
	16	Red	000 ◊ 255	0-100%	6
	17	Green	000 ◊ 255	0-100%	
	18	Blue	000 ◊ 255	0-100%	
	19	Red	000 ◊ 255	0-100%	7
	20	Green	000 ◊ 255	0-100%	
	21	Blue	000 ◊ 255	0-100%	
	22	Red	000 ◊ 255	0-100%	8
	23	Green	000 ◊ 255	0-100%	
	24	Blue	000 ◊ 255	0-100%	
	25	Red	000 ◊ 255	0-100%	9
	26	Green	000 ◊ 255	0-100%	
	27	Blue	000 ◊ 255	0-100%	
	28	Red	000 ◊ 255	0-100%	10
	29	Green	000 ◊ 255	0-100%	
	30	Blue	000 ◊ 255	0-100%	
	31	Red	000 ◊ 255	0-100%	11
	32	Green	000 ◊ 255	0-100%	
	33	Blue	000 ◊ 255	0-100%	
	34	Red	000 ◊ 255	0-100%	12
	35	Green	000 ◊ 255	0-100%	
	36	Blue	000 ◊ 255	0-100%	

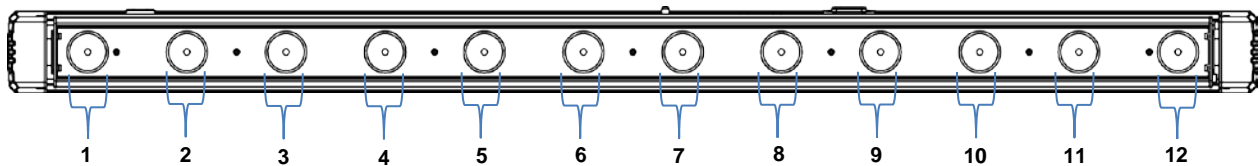


**42-Channel
(cont.)**

Channel	Function	Value	Setting
37	Speed	000 ó 255	Chase speed, slow to fast (when Channel 38 is from 032–223)
	Strobe	000 ó 015 016 ó 255	No function Strobe (slow to fast)
38	Auto Programs	000 ó 031	No function
		032 ó 045	Chase 1
		046 ó 059	Chase 2
		060 ó 072	Chase 3
		073 ó 086	Chase 4
		087 ó 100	Chase 5
		101 ó 113	Chase 6
		114 ó 127	Chase 7
		128 ó 141	Chase 8
		142 ó 154	Chase 9
		155 ó 168	Chase 10
		169 ó 182	Chase 11
		183 ó 195	Chase 12
196 ó 209	Chase 13		
210 ó 223	Chase 14 (random Chases 1–13)		
224 ó 255	Sound-Active mode		
39	Dimmer	000 ó 255	0–100%
40	Tilt	000 ó 255	0–270°
41	Tilt Speed	000 ó 255	Tilt speed (fast to slow)
42	Dimmer Mode	000 ó 051	Dimmer mode manually set in Menu Options
		052 ó 101	Dimmer mode off
		102 ó 152	Dimmer mode 1 (fast speed)
		153 ó 203	Dimmer mode 2 (middle speed)
		204 ó 255	Dimmer mode 3 (slow speed)


38-Channel

Channel	Function	Value	Setting	Section
1	Red	000 ◊ 255	0-100%	1
2	Green	000 ◊ 255	0-100%	
3	Blue	000 ◊ 255	0-100%	
4	Red	000 ◊ 255	0-100%	2
5	Green	000 ◊ 255	0-100%	
6	Blue	000 ◊ 255	0-100%	
7	Red	000 ◊ 255	0-100%	3
8	Green	000 ◊ 255	0-100%	
9	Blue	000 ◊ 255	0-100%	
10	Red	000 ◊ 255	0-100%	4
11	Green	000 ◊ 255	0-100%	
12	Blue	000 ◊ 255	0-100%	
13	Red	000 ◊ 255	0-100%	5
14	Green	000 ◊ 255	0-100%	
15	Blue	000 ◊ 255	0-100%	
16	Red	000 ◊ 255	0-100%	6
17	Green	000 ◊ 255	0-100%	
18	Blue	000 ◊ 255	0-100%	
19	Red	000 ◊ 255	0-100%	7
20	Green	000 ◊ 255	0-100%	
21	Blue	000 ◊ 255	0-100%	
22	Red	000 ◊ 255	0-100%	8
23	Green	000 ◊ 255	0-100%	
24	Blue	000 ◊ 255	0-100%	
25	Red	000 ◊ 255	0-100%	9
26	Green	000 ◊ 255	0-100%	
27	Blue	000 ◊ 255	0-100%	
28	Red	000 ◊ 255	0-100%	10
29	Green	000 ◊ 255	0-100%	
30	Blue	000 ◊ 255	0-100%	
31	Red	000 ◊ 255	0-100%	11
32	Green	000 ◊ 255	0-100%	
33	Blue	000 ◊ 255	0-100%	
34	Red	000 ◊ 255	0-100%	12
35	Green	000 ◊ 255	0-100%	
36	Blue	000 ◊ 255	0-100%	
37	Tilt	000 ◊ 255	0-270°	
38	Tilt Speed	000 ◊ 255	Tilt speed (fast to slow)	

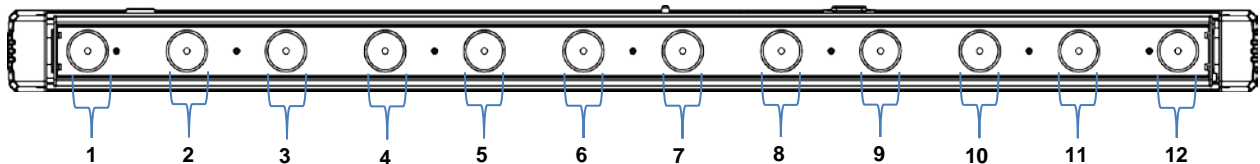


20-Channel

Channel	Function	Value	Setting	Section
1	Red	000 ó 255	0-100%	1
2	Green	000 ó 255	0-100%	
3	Blue	000 ó 255	0-100%	
4	Red	000 ó 255	0-100%	2
5	Green	000 ó 255	0-100%	
6	Blue	000 ó 255	0-100%	
7	Red	000 ó 255	0-100%	3
8	Green	000 ó 255	0-100%	
9	Blue	000 ó 255	0-100%	
10	Red	000 ó 255	0-100%	4
11	Green	000 ó 255	0-100%	
12	Blue	000 ó 255	0-100%	
13	Red	000 ó 255	0-100%	5
14	Green	000 ó 255	0-100%	
15	Blue	000 ó 255	0-100%	
16	Red	000 ó 255	0-100%	6
17	Green	000 ó 255	0-100%	
18	Blue	000 ó 255	0-100%	
19	Tilt	000 ó 255	0-270°	
20	Tilt Speed	000 ó 255	Tilt speed (fast to slow)	

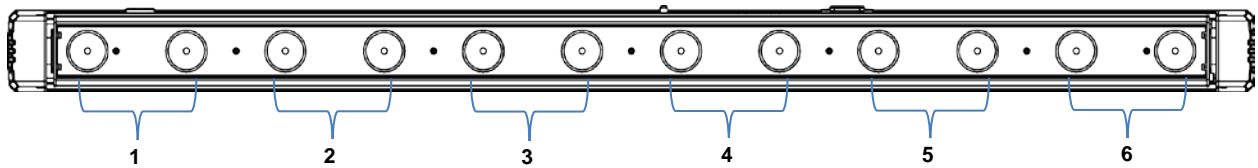


14-Channel

Channel	Function	Value	Setting	Section
1	Red	000 ◊ 255	0-100%	1
2	Green	000 ◊ 255	0-100%	
3	Blue	000 ◊ 255	0-100%	
4	Red	000 ◊ 255	0-100%	2
5	Green	000 ◊ 255	0-100%	
6	Blue	000 ◊ 255	0-100%	
7	Red	000 ◊ 255	0-100%	3
8	Green	000 ◊ 255	0-100%	
9	Blue	000 ◊ 255	0-100%	
10	Red	000 ◊ 255	0-100%	4
11	Green	000 ◊ 255	0-100%	
12	Blue	000 ◊ 255	0-100%	
13	Tilt	000 ◊ 255	0-270°	
14	Tilt Speed	000 ◊ 255	Tilt speed (fast to slow)	

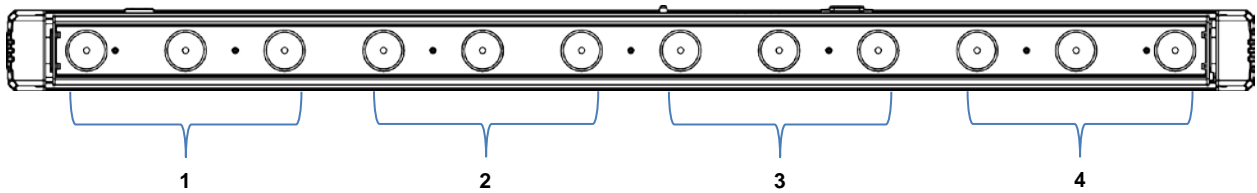

11-Channel


Channel	Function	Value	Setting	Section
1	Red	000 ◊ 255	0-100%	1
2	Green	000 ◊ 255	0-100%	
3	Blue	000 ◊ 255	0-100%	
4	Red	000 ◊ 255	0-100%	2
5	Green	000 ◊ 255	0-100%	
6	Blue	000 ◊ 255	0-100%	
7	Red	000 ◊ 255	0-100%	3
8	Green	000 ◊ 255	0-100%	
9	Blue	000 ◊ 255	0-100%	
10	Tilt	000 ◊ 255	0-270°	
11	Tilt Speed	000 ◊ 255	Tilt speed (fast to slow)	

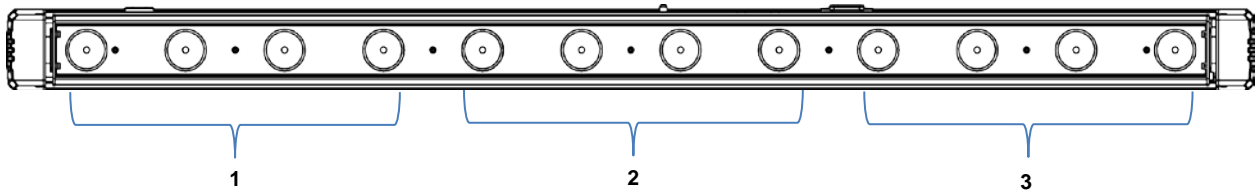

10-Channel

Channel	Function	Value	Setting
1	Red	000 ó 255	0–100%
2	Green	000 ó 255	0–100%
3	Blue	000 ó 255	0–100%
4	Color Macros	000 ó 015	No function
		016 ó 255	Color macros
5	Speed	000 ó 255	Chase speed, slow to fast (when Channel 6 is from 032–223)
	Strobe (Channels 1–3 only)	000 ó 015 016 ó 255	No function Strobe (slow to fast)
6	Auto Programs	000 ó 031	No function
		032 ó 045	Chase 1
		046 ó 059	Chase 2
		060 ó 072	Chase 3
		073 ó 086	Chase 4
		087 ó 100	Chase 5
		101 ó 113	Chase 6
		114 ó 127	Chase 7
		128 ó 141	Chase 8
		142 ó 154	Chase 9
		155 ó 168	Chase 10
		169 ó 182	Chase 11
		183 ó 195	Chase 12
196 ó 209	Chase 13		
210 ó 223	Chase 14 (random Chases 1–13)		
224 ó 255	Sound-Active mode		
7	Dimmer	000 ó 255	0–100%
8	Tilt	000 ó 255	0–270°
9	Tilt Speed	000 ó 255	Tilt speed (fast to slow)
10	Dimmer Mode	000 ó 051	Dimmer mode manually set in Menu Options
		052 ó 101	Dimmer mode off
		102 ó 152	Dimmer mode 1 (fast speed)
		153 ó 203	Dimmer mode 2 (middle speed)
		204 ó 255	Dimmer mode 3 (slow speed)

8-Channel	Channel	Function	Value	Setting	Section
	1	Red	000 ◊ 255	0-100%	1
	2	Green	000 ◊ 255	0-100%	
	3	Blue	000 ◊ 255	0-100%	
	4	Red	000 ◊ 255	0-100%	2
	5	Green	000 ◊ 255	0-100%	
	6	Blue	000 ◊ 255	0-100%	
	7	Tilt	000 ◊ 255	0-270°	
	8	Tilt Speed	000 ◊ 255	Tilt speed (fast to slow)	

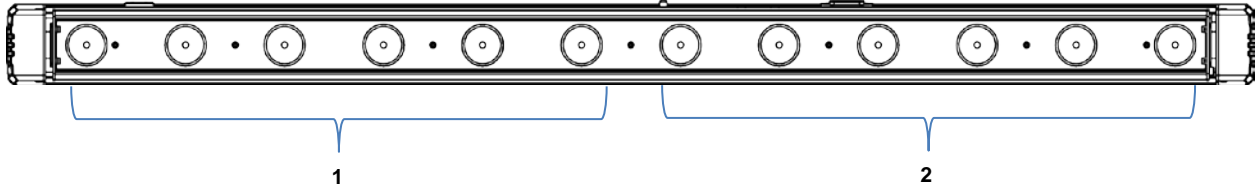

6-Channel	Channel	Function	Value	Setting
	1	Red	000 ◊ 255	0-100%
	2	Green	000 ◊ 255	0-100%
	3	Blue	000 ◊ 255	0-100%
	4	Dimmer	000 ◊ 255	0-100%
	5	Tilt	000 ◊ 255	0-270°
	6	Tilt Speed	000 ◊ 255	Tilt speed (fast to slow)

5-Channel	Channel	Function	Value	Setting
	1	Red	000 ◊ 255	0-100%
	2	Green	000 ◊ 255	0-100%
	3	Blue	000 ◊ 255	0-100%
	4	Tilt	000 ◊ 255	0-270°
	5	Tilt Speed	000 ◊ 255	Tilt speed (fast to slow)

Configuration (Standalone)

Set the product in one of the standalone modes to control without a DMX controller.

- Connect the product to a suitable power outlet.



Never connect a product that is operating in any stand-alone mode (Static, Automatic, or Sound-Active) to a DMX string connected to a DMX controller. Products in standalone mode may transmit DMX signals that could interfere with the DMX signals from the controller.

Sound-Active Mode

To enable the Sound-Active mode, do the following:

1. Press **<MENU>** repeatedly until **Snd** shows on the display.
2. Press **<ENTER>**.
3. Turn the music on and adjust the sound sensitivity knob until the product starts responding to the beat of the music.



The product will only respond to low frequencies of music (bass and drums).

Automatic Mode

To enable the auto programs, follow the instructions below:

1. Press **<MENU>** repeatedly until **P--** shows on the display.
2. Press **<ENTER>** and **P 1–P 14** shows on the display.
3. Use **<UP>** or **<DOWN>** to select the desired auto program.
4. Press **<ENTER>**.

Program Speed

To select the auto program speed, do the following:

1. Press **<MENU>** repeatedly until **S--** shows on the display.
2. Use **<UP>** or **<DOWN>** to select the desired auto program speed (**S 1–S100**, slow to fast).
3. Press **<ENTER>**.

Static Color To select a static color, follow the instructions below:

1. Press **<MENU>** repeatedly until **C--** shows on the display.
2. Press **<ENTER>** and one of the following shows on the display:
 - **r** (red)
 - **g** (green)
 - **b** (blue)
 - **gb** (cyan)
 - **r b** (magenta)
 - **rg** (yellow)
 - **rgb** (white)
3. Use **<UP>** or **<DOWN>** to select the desired preset color.
4. Press **<ENTER>**.

Custom Color Mixing To custom mix a color, do the following:

1. Press **<MENU>** repeatedly until **U--** shows on the display.
 2. Press **<ENTER>** and one of the following shows on the display:
 - **r 0-r255** (red, 0–100%)
 - **g 0-g255** (green, 0–100%)
 - **b 0-b255** (blue, 0–100%)The option for setting the angle of the tilt position also appears:
 - **t 0-t255** (0–270°)
 3. Press **<ENTER>** repeatedly to select the desired color or the tilt option.
 4. Use **<UP>** or **<DOWN>** to select the desired value (**0–255**).
- NOTE:** With the color options, selecting **0** will turn the color off.
5. Press **<ENTER>** to set the value and continue to the next custom mixing option.
 6. Repeat steps 3 to 5 until you have your desired color and tilt position.

Selecting the Tilting Action

To select the tilting action, follow the instructions below:

1. Press **<MENU>** repeatedly until **t--** shows on the display.
2. Press **<ENTER>** and **t 0-t100** shows on the display.
3. Use **<UP>** or **<DOWN>** to select:
 - **t 0-t 50** to set the desired tilt position (0–270°)
 - **t 51-t100** for automatic motorized tilt speed (slow to fast)
4. Press **<ENTER>**.

Locking and Unlocking the Touch Control Panel

To lock/unlock the touch control panel, do the following:

1. Press **<MENU>** repeatedly until **Encd** shows on the display.
2. Press **<ENTER>** and **OFF** (unlocked) or **ON** (locked) shows on the display.
3. Use **<UP>** or **<DOWN>** to select the desired option.
4. Press **<ENTER>**.

Selecting the Dimmer Mode

To select the dimmer mode, follow the instructions below:

1. Press **<MENU>** repeatedly until **dim** shows on the display.
2. Press **<ENTER>** and one of the following shows on the display:
 - **OFF** (dimmer speed off)
 - **dim1** (dimmer, fast speed)
 - **dim2** (dimmer, middle speed)
 - **dim3** (dimmer, slow speed)
3. Use **<UP>** or **<DOWN>** to select the desired dimmer mode.
4. Press **<ENTER>**.

Calibrating the Moving Strip

To enable the calibration mode, do the following:

1. Press **<MENU>** repeatedly until **OFFS** shows on the display.
2. Press **<ENTER>** and **0-255** shows on the display.
3. Use **<UP>** or **<DOWN>** to reposition the moving strip to the desired position.
4. Press **<ENTER>**.

Master/Slave Mode

The Master/Slave mode allows a single COLORband™ PiX-M unit (the “master”) to control the actions of one or more COLORband™ PiX-M units (the “slaves”) without the need of a DMX controller. The master unit will be set to operate in either Automatic or Sound-Active mode, while the slave units will be set to operate in Slave mode. Once set and connected, the slave units will operate in unison with the master unit.

Configure the units as indicated below.

Slave units:

1. Press **<MENU>** repeatedly until any DMX personality shows on the display.
2. Press **<ENTER>** to accept.
3. Set the DMX address to **d 1**.
4. Connect the DMX input of the first slave unit to the DMX output of the master unit.
5. Connect the DMX input of the subsequent slave units to the DMX output of the previous slave unit.
6. Finish setting and connecting all the slave units.

Master unit:

1. Set the master unit to operate in either an auto program or Sound-Active mode.
2. Make the master unit the first unit in the DMX daisy chain.



- **Configure all the slave units before connecting the master unit to the DMX daisy chain.**
- **Never connect a DMX controller to a DMX string configured for Master/Slave operation because the controller may interfere with the signals from the master unit.**
- **Do not connect more than 31 slave units to the master unit.**

5. TECHNICAL INFORMATION

Product Maintenance

Dust build-up reduces light output performance and can cause overheating. This can lead to reduction of the light source's life and mechanical wear. To maintain optimum performance and minimize wear, clean the product at least twice a month. However, usage and environmental conditions contribute to increased cleaning frequency.

To clean the product, follow the instructions below:


- Unplug the product from power.
- Wait until the product is at room temperature.
- Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external surface/vents.
- Clean all external optics and glass/transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
- Apply the solution directly to a soft, lint-free cotton cloth or a lens cleaning tissue.
- Softly wipe any dirt or grime to the outside edges of the external optics or glass/transparent surface.
- Gently polish the external optics and glass/transparent surfaces until they are free of haze and lint.



Always dry the external optics and glass/transparent surfaces carefully after cleaning them.

6. TECHNICAL SPECIFICATIONS

Dimensions and Weight	Length	Width	Height	Weight
	40.9 in (1040 mm)	2.6 in (67 mm)	7.4 in (188 mm)	10.2 lbs (4.7 kg)
Note: Dimensions in inches rounded to the nearest decimal digit.				
Power	Power Supply Type	Range	Voltage Selection	
	Switching (internal)	100~240 V, 50/60 Hz	Auto-ranging	
	Parameter	120 V, 60 Hz	230 V, 50 Hz	
	Consumption	113 W	117 W	
	Operating	1.0 A	0.5 A	
Power I/O	Power I/O	US/Worldwide	UK/Europe	
	Power input connector	IEC	IEC	
	Power output connector	Edison	IEC	
	Power Cord plug	Edison (US)	Local plug	
Light Source	Type	Power	Lifespan	
	LED	3 W	50,000 hours	
	Color	Quantity	Current	
	Tri-color	12	350 mA	
Photo Optic	Parameter			
	Illuminance @ 2 m	2321 lx		
	Beam angle	20°		
	Field angle	34°		
	Tilt angle	0~270°		
Thermal	Maximum External Temp.	Cooling System		
	104° F (40° C)	Convection		
DMX	I/O Connectors	Connector Type	Channel Range	
	3- and 5-pin XLR	Sockets	5, 6, 8, 10, 11, 14, 20, 38 or 42	
Ordering	Product Name	Item Code	UPC Number	
	COLORband™ PiX-M	03030665	781462210137	

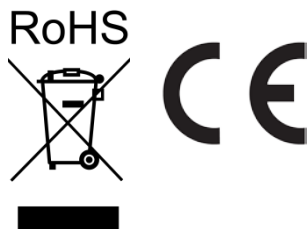

To return a product or request support:

- In the U.S., contact CHAUVET® World Headquarters (see below).
- In the UK or Ireland, contact CHAUVET® Europe Ltd. (see below).
- In any other country, DO NOT contact CHAUVET®. Contact your distributor. See www.chauvetlighting.com for distributors outside the U.S., United Kingdom, or Ireland.



If you live outside the U.S., United Kingdom, or Ireland, contact your distributor of record and follow their instructions on how to return CHAUVET® products to them. Visit our website for contact details.

Returns

Call the corresponding CHAUVET® Technical Support office and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause for the return.

You must send the merchandise prepaid, in its original box, and with its original packing and accessories. CHAUVET® will not issue call tags.

Clearly label the package with the RMA number. CHAUVET® will refuse any product returned without an RMA number.



Write the RMA number on a properly affixed label. DO NOT write the RMA number directly on the box.

Before sending the product, clearly write the following information on a piece of paper and place it inside the box:

- Your name
- Your address
- Your phone number
- RMA number
- A brief description of the problem

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be your responsibility. FedEx packing or double-boxing are recommended.



CHAUVET® reserves the right to use its own discretion to repair or replace returned product(s).

Contact Us

World Headquarters CHAUVET®

General Information

Address: 5200 NW 108th Avenue
Sunrise, FL 33351
Voice: (954) 577-4455
Fax: (954) 929-5560
Toll free: (800) 762-1084

Technical Support

Voice: (954) 577-4455 (Press 4)
Fax: (954) 756-8015
Email: tech@chauvetlighting.com

World Wide Web

www.chauvetlighting.com

United Kingdom & Ireland CHAUVET® Europe Ltd.

General Information

Address: Unit 1C
Brookhill Road Industrial Estate
Pinxton, Nottingham, UK
NG16 6NT
Voice: +44 (0)1773 511115
Fax: +44 (0)1773 511110

Technical Support

Email: uktech@chauvetlighting.com

World Wide Web

www.chauvetlighting.co.uk